

Toleranztabelle

Außenmaße (Wellen):

Grenzabmaße in μm ($1 \mu\text{m} = 0,001 \text{ mm}$)

Nennmaßbereich in mm	Range	f6	f7	g6	h3	h4	h5	h6	h8	h9	h15	j6	js4	k6	m5	m6	n6	p6	r6
von	1	-6	-6	-2	0	0	0	0	0	0	0	+4	+1.5	+6	+6	+8	+10	+12	+16
bis	3	-12	-16	-8	-2	-3	-4	-6	-14	-25	-400	-2	-1.5	0	+2	+2	+4	+6	+10
über	3	-10	-10	-4	0	0	0	0	0	0	0	+6	+2	+9	+9	+12	+16	+20	+23
bis	6	-18	-22	-12	-2.5	-4	-5	-8	-18	-30	-480	-2	-2	+1	+4	+4	+8	+12	+15
über	6	-13	-13	-5	0	0	0	0	0	0	0	+7	+2	+10	+12	+15	+19	+24	+28
bis	10	-22	-28	-14	-2.5	-4	-6	-9	-22	-36	-580	-2	-2	+1	+6	+6	+10	+15	+19
über	10	-16	-16	-6	0	0	0	0	0	0	0	+8	+2.5	+12	+15	+18	+23	+29	+34
bis	18	-27	-34	-17	-3	-5	-8	-11	-27	-43	-700	-3	-2.5	+1	+7	+7	+12	+18	+23
über	18	-20	-20	-7	0	0	0	0	0	0	0	+9	+3	+15	+17	+21	+28	+35	+41
bis	30	-33	-41	-20	-4	-6	-9	-13	-33	-52	-840	-4	-3	+2	+8	+8	+15	+22	+28
über	30	-25	-25	-9	0	0	0	0	0	0	0	+11	+3.5	+18	+20	+25	+33	+42	+50
bis	50	-41	-50	-25	-4	-7	-11	-16	-39	-62	-1000	-5	-3.5	+2	+9	+9	+17	+26	+34
über	50	-30	-30	-10	0	0	0	0	0	0	0	+12	+4	+21	+24	+30	+39	+51	+60
bis	80	-49	-60	-29	-5	-8	-13	-19	-46	-74	-1200	-7	-4	+2	+11	+11	+20	+32	+43
über	80	-36	-36	-12	0	0	0	0	0	0	0	+13	+5	+25	+28	+35	+45	+59	+73
bis	120	-58	-71	-34	-6	-10	-15	-22	-54	-87	-1400	-9	-5	+3	+13	+13	+23	+37	+51

Innenmaße (Bohrungen):

Grenzabmaße in μm ($1 \mu\text{m} = 0,001 \text{ mm}$)

Nennmaßbereich in mm	Range	E6	F6	F7	G6	G7	H5	H6	H7	H8	H9	H10	H11	J7	K6	M6	N6	P6	P7	R6
von	1	20	12	16	8	12	4	6	10	14	25	40	60	4	0	-2	-4	-6	-10	-10
bis	3	14	6	6	2	2	0	0	0	0	0	0	0	-6	-6	-8	-10	-12	-16	-16
über	3	28	18	22	12	16	5	8	12	18	30	48	75	6	2	-1	-5	-9	-8	-12
bis	6	20	10	10	4	4	0	0	0	0	0	0	0	-6	-6	-9	-13	-17	-20	-20
über	6	34	22	28	14	20	6	9	15	22	36	58	90	8	2	-3	-7	-12	-9	-15
bis	10	25	13	13	5	5	0	0	0	0	0	0	0	-7	-7	-12	-16	-21	-24	-25
über	10	43	27	34	17	24	8	11	18	27	43	70	110	10	2	-4	-9	-15	-11	-20
bis	18	32	16	16	6	6	0	0	0	0	0	0	0	-8	-9	-15	-20	-26	-29	-31
über	18	53	33	41	20	28	9	13	21	33	52	84	130	12	2	-4	-11	-18	-14	-24
bis	30	40	20	20	7	7	0	0	0	0	0	0	0	-9	-11	-17	-24	-31	-35	-37
über	30	+66	+41	+50	+25	+34	+11	+16	+25	+39	+62	+100	+160	+14	+3	-5	-12	-21	-17	-29
bis	50	+50	+25	+25	+9	+9	0	0	0	0	0	0	0	-11	-13	-20	-28	-37	-42	-45
über	50	+79	+49	+60	+29	+40	+13	+19	+30	+46	+74	+120	+190	+18	+4	-6	-14	-26	-21	-35
bis	80	+60	+30	+30	+10	+10	0	0	0	0	0	0	0	-12	-15	-24	-33	-45	-51	-56
über	80	+94	+58	+71	+34	+47	+15	+22	+35	+54	+87	+140	+220	+22	+5	-7	-16	-30	-24	-44
bis	120	+72	+36	+36	+12	+12	0	0	0	0	0	0	0	-13	-18	-28	-38	-52	-59	-66

Wir bauen Ihre globale Supply Chain für Fertigungsteile

Ihr Kontakt

www.cnc24.com
info@cnc24.com
 030 994 04 904